

aquastream®

Modular system
for mechanical water meters

User manual



Legal notice

Document release index

Version	Date	Modification(s)
01	04.06.2019	First version
02	06.09.2019	Corrections/Improvements
03	02.12.2019	Adding AQS-W8 Wireless M-Bus module
04	22.08.2020	Adding AQS-MBOC Dual outputs module
05	27.04.2021	Corrections/Improvements
06	02.03.2022	Adding AQS-L8 LoRaWAN module
07	21.10.2022	Modifications for AQS-L8 (telegram content)
08	16.11.2023	Correction LoRa Stack
09	23.07.2025	New application IM Connect+®
10	20.01.2026	Adding Wired connection / Radio connectivity
11	19.08.2026	Adding iOS compatibility

Original instructions

Publisher

INTEGRA Metering AG
Ringstrasse 75
CH-4106 Therwil
Switzerland

Phone: +41 61 725 11 22

info@integra-metering.com

www.integra-metering.com

Reproduction of these instructions or parts of them in whatever form is not permitted without express written permission from the publisher.

The figures and information in these instructions are subject to technical changes that become necessary to improve the product.

Content

1. Safety.....	5
1.1 Intended use.....	5
1.2 Indications on safety instructions and symbols.....	5
1.3 Safety instructions and preventive measures.....	5
1.4 About this manual	6
1.5 Handling, transport and storage.....	6
1.6 Return of the devices	6
2. Scope of delivery and accessories	7
3. Product description.....	7
3.1 Products variants.....	8
3.1.1 aquastream® M-Bus.....	8
3.1.2. aquastream® Radio W8 (Wireless M-Bus)	8
3.1.3. aquastream® M-Bus/Pulses.....	8
3.1.4. aquastream® Radio L8 (LoRaWAN).....	8
3.2 Dimensions.....	9
3.3 Identification aquastream® M-Bus.....	10
3.4 Identification aquastream® Radio W8 (Wireless M-Bus)	10
3.5 Identification aquastream® Radio L8 (LoRaWAN)	11
3.6 Identification aquastream® M-Bus/Pulses	11
3.6 QR-Code Format.....	12
4. Storage.....	13
5. Installation	13
6. Wired connection / Radio connectivity	13
6.1 M-Bus interface.....	13
6.2 M-Bus/Pulses interface	13
6.3 Wireless M-Bus communication	14
6.4 LoRaWAN communication	14
7. Connection.....	14
7.1 aquastream® M-Bus Connection.....	14
7.2 aquastream® M-Bus/Pulses Connection	14
7.2.1 M-Bus Output	15
7.2.2 Pulses Output	17
7.2.3 Pulses Output Schematics	18
7.3 Features.....	18
7.3.1 Leakage Alarm	18
7.3.2 Backflow Alarm	19
7.3.3 Burst Alarm.....	19
7.3.4 Over Load Alarm.....	20
7.3.5 Data Logger.....	20
8. Configuration of the aquastream® modules.....	21
8.1 IM Connect+® Activation and Starting	21
8.1.1. Starting the configuration Software.....	21
8.1.2. Software Activation	22
8.2 Scanning aquastream® module.....	23
8.3 Different Information types.....	24
8.4 Display of values.....	25
8.4.1 Display of values aquastream® M-Bus.....	25
8.4.2 Display of Values aquastream® Radio W8 (Wireless M-Bus).....	26
8.4.3 Display of Values aquastream® M-Bus/Pulses.....	27
8.4.4 Display of Values aquastream® Radio L8 (LoRaWAN)	28
7.5 Events and Alarms	29
8.6 Historic (Data Logger)	30

8.7	Modification of the values	30
8.7.1	aquastream® M-Bus modification.....	30
8.7.2	aquastream® Radio W8 (Wireless M-Bus) modification	33
8.7.3	aquastream® M-Bus/Pulses modification	36
8.7.4	aquastream® Radio L8 (LoRaWAN) modification.....	39
8.8	Apply your modifications	41
9.	Technical data	42
9.1	aquastream® M-Bus.....	42
9.2	aquastream® M-Bus/Pulses.....	43
9.3	aquastream® Radio W8 (Wireless M-Bus/OMS)	44
9.4	aquastream® Radio L8 (LoRaWAN)	45
10.	Maintenance.....	45
11.	Waste disposal	46
12.	Certification, regulation	46

1. Safety

1.1 Intended use

The aquastream® module is designed and intended exclusively for use as a communication module for the PMK (cold water) and PMW (hot water) water meter family.

Inappropriate or improper use may result in the operational safety of the device no longer being guaranteed. We accept no liability for any resulting damage.

1.2 Indications on safety instructions and symbols

The devices are designed to meet the latest safety requirements. They have been tested and delivered in a condition that guarantees safe operation. However, the devices can still be a source of danger if used improperly or not in accordance with their intended purpose. Therefore, always observe the safety instructions represented by the symbols in these operating instructions:

WARNING



WARNING indicates an action or measure, which, if not avoided, could result in death or serious injury. Always follow instructions and proceed with caution.

CAUTION



CAUTION indicates an action or measure which, if not carried out correctly, may result in minor injury and/or malfunction or destruction of the equipment. Always follow the instructions.

INDICATION



INDICATION indicates an action or measurement, which, if not carried out correctly, may indirectly affect the operation or cause an unexpected reaction of the equipment.

NOTE



NOTE provides instructions and recommendations for efficient and trouble-free operation.

REFERENCE



REFERENCE refers to other documents. If available, QR code.

1.3 Safety instructions and preventive measures

The manufacturer declines all responsibility for failure to observe the following safety instructions and precautions:

- › Any modification made to the unit without the prior written authorization of the manufacturer will immediately void the product liability and warranty.
- › Installation, operation, maintenance and dismantling of this appliance must be carried out only by qualified and trained personnel authorized by the manufacturer, the operator or the owner of the installation. Qualified personnel must have read and understood these operating and installation instructions in their entirety and must comply with the instructions contained herein.
- › Check all connections, settings and technical data of the peripheral devices.
- › Do not open the housing or parts of the housing.
- › The specified classifications for mechanical loads (e.g. pressure, temperature, protection class (IP), etc.) must not be exceeded.
- › Only operate the system under the specified ambient conditions and in the specified mounting positions.

- › Protect the system against overvoltage, e.g. by means of suitable fuses. In particular, electrical welding must be avoided on associated equipment.
- › None of the information contained in this manual or in other documents relieves planners, engineers, installers and operators from their own careful and thorough evaluation of the system configuration with regard to functionality and operational safety.
- › Local labour and safety laws and regulations must be observed.

1.4 About this manual

The manufacturer reserves the right to make changes to the technical specifications without prior notice. You can obtain the latest information and versions of these operating instructions from your local branch office as well as on the website.

WARNING



The manufacturer accepts no liability for failure to comply with the instructions and procedures described in this manual!

INDICATION



These operating instructions are intended for qualified personnel and therefore do not contain any basic working steps. Before installing or commissioning the device, read and understand the installation instructions and these operating instructions in full. Please keep this manual for future reference!

1.5 Handling, transport and storage

Thank you for choosing this high quality electronic device. Please check all components and parts delivered immediately after receipt of the goods.

The scope of delivery is described on the delivery note and the contents are indicated on the packaging. Please check all components and parts delivered immediately after receipt of the delivery. Transport damage must be reported to the carrier immediately upon receipt of the goods!

Please note that the device must be protected against shock and vibration!

1.6 Return of the devices

The aquastream® modules contain lithium batteries; therefore transport must be carried out in accordance with the specific safety instructions for devices with lithium batteries.

CAUTION



For aquastream® Radio modules (Wireless M-Bus & LoRaWAN), you must disable radio transmission with the IM Connect+® application before shipment.

2. Scope of delivery and accessories

The scope of delivery is described on the delivery note. Please check all components and parts delivered immediately upon receipt of the goods. Transport damage must be reported immediately!

Quantity	Description	Picture
1x	aquastream® module	
1x	Gel Connector (only for the M-Bus version)	
2x	Plastic rivets	
2x	Sealing labels	
1x	Installation guide	

3. Product description

The aquastream® module is the new generation of modules that has been designed to extend the water meter to an M-Bus, Pulse or radio reading solution for remote reading (Wireless M-Bus/OMS & LoRaWAN).

The aquastream® module range is available in several variants: version with M-Bus interface, dual M-Bus and pulse interfaces and also a version with wireless radio interface (Wireless M-Bus/OMS & LoRaWAN). These different versions are presented in detail in this document.

The different versions of the aquastream® module can be installed on all PMK (cold water) and PMW (hot water) water meters from DN15 to DN50.



3.1 Products variants

3.1.1 aquastream® M-Bus

The aquastream® M-Bus is designed to be connected to an M-Bus network with a 2-wire cable. During operation in the M-Bus network, the aquastream® M-Bus module is powered by the network and can provide information according to the M-Bus protocol EN 13757-2/3. An integrated battery ensures the operation of the measurement even in case of a prolonged power failure of the M-Bus network. At the same time, the battery ensures that the meter reading and configuration data are backup.

3.1.2. aquastream® Radio W8 (Wireless M-Bus)

The aquastream® Radio W8 (Wireless M-Bus/OMS) is designed for mobile playback applications with integrated radio interface. It complies with the OMS V4.0 standard and sends a frame every 16 seconds with several pieces of information that can be read by the software. The aquastream® radio W8 module comes with a built-in battery with a typical lifetime of 16 years (15 years operation + 1 year storage).

3.1.3. aquastream® M-Bus/Pulses

The aquastream® M-Bus/Pulses module is designed for simultaneous connection to an M-Bus network with a 2-wire cable and to a pulse collection system with a configurable 2 or 3-wire output. During operation in the M-Bus network, the aquastream® M-Bus/Pulses module is powered by the network and can provide information according to the M-Bus protocol EN 13757-2/3. An integrated battery ensures the operation of the measurement even in case of a prolonged power failure of the M-Bus network. At the same time, the battery ensures that the meter reading and configuration data are backup. The pulse output is fully configurable allowing several output modes (2-wire or 3-wire), pulse value selection and pulse duration.

3.1.4. aquastream® Radio L8 (LoRaWAN)


The aquastream® Radio L8 (LoRaWAN) is designed for fixed network applications with integrated radio interface. It complies with the LoRaWAN standard and sends a frame twice a days with several pieces of information that can be read by an LoRaWAN Gateway. The aquastream® radio L8 module comes with a built-in battery with a typical lifetime of 16 years (15 years operation + 1 year storage).

Version	Description	Picture
aquastream® M-Bus	M-Bus Interface M-Bus with cable (AQS-MB)	
aquastream® Radio W8 Wireless M-Bus/OMS 868MHz	Wireless Radio Interface (AQS-W8)	
aquastream® Radio L8 LoRaWAN® 868MHz	Wireless Radio Interface (AQS-L8)	


aquastream® M-Bus/Pulses

 Dual M-Bus and Pulses
 interfaces with cable
 (AQS-MBOC)


3.2 Dimensions

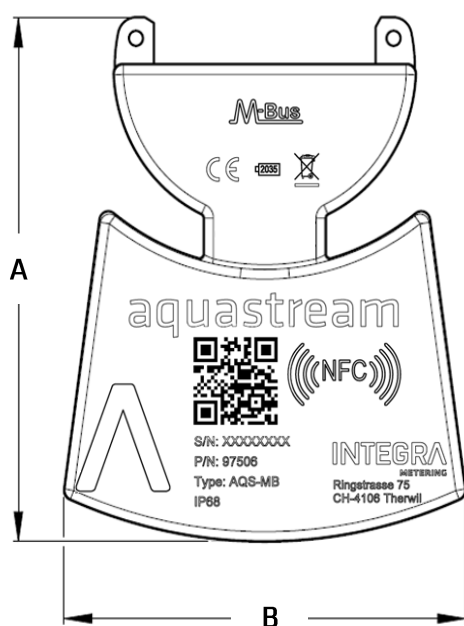


	mm
A	108
B	89
C	46

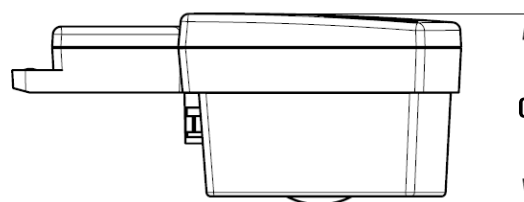

3.3 Identification aquastream® M-Bus


Various information is available on the front of the product, as described here.

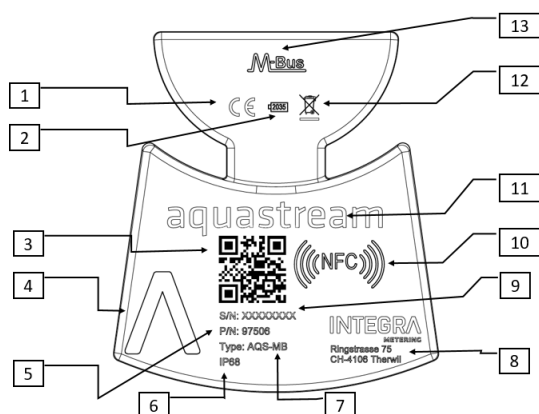

N°	Description
1	CE Marking
2	Year of Battery end life
3	QR-Code
4	INTEGRA Metering Logo
5	Article number
6	Protection Class IP68
7	Module type (AQS-MB)
8	INTEGRA Metering Address
9	Module Serial number
10	NFC antenna
11	Product name
12	Recycling logo
13	Communication M-Bus protocol

3.4 Identification aquastream® Radio W8 (Wireless M-Bus)


Various information is available on the front of the product, as described here.

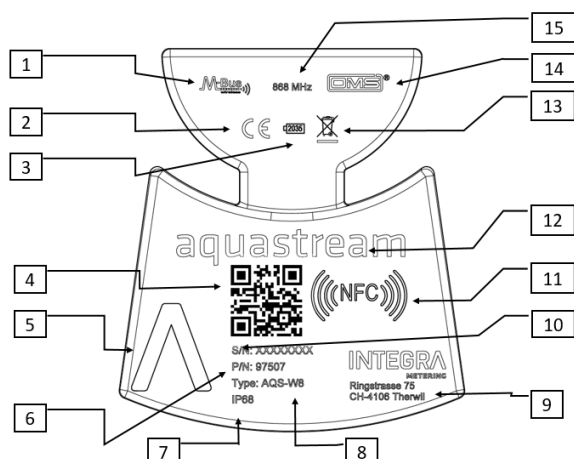

N°	Description
1	Wireless Radio built-in
2	CE Marking
3	Year of Battery end life
4	QR-Code
5	INTEGRA Metering Logo
6	Article number
7	Protection Class IP68
8	Module type (AQS-W8)
9	INTEGRA Metering Address
10	Module Serial number
11	NFC antenna
12	Product name
13	Recycling logo
14	OMS Conform
15	Communication frequency - 868MHz

3.5 Identification aquastream® Radio L8 (LoRaWAN)


Various information is available on the front of the product, as described here.

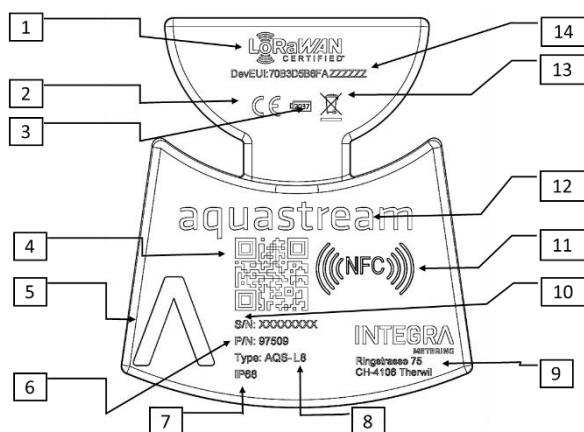

N°	Description
1	LoRaWAN Radio built-in
2	CE Marking
3	Year of Battery end life
4	QR-Code
5	INTEGRA Metering Logo
6	Article number
7	Protection Class IP68
8	Module type (AQS-L8)
9	INTEGRA Metering Address
10	Module Serial number
11	NFC antenna
12	Product name
13	Recycling logo
14	LoRaWAN DevEUI identification

3.6 Identification aquastream® M-Bus/Pulses

Various information is available on the front of the product, as described here.

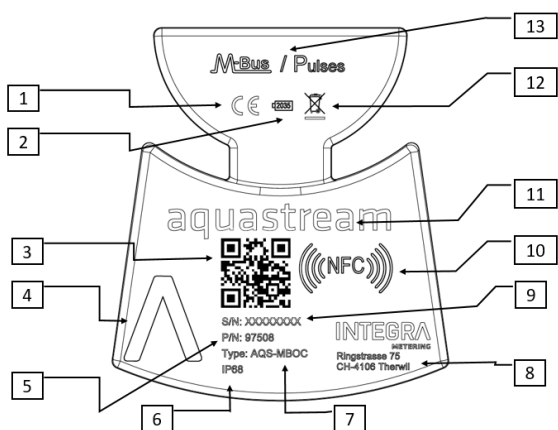

N°	Description
1	CE Marking
2	Year of Battery end life
3	QR-Code
4	INTEGRA Metering Logo
5	Article number
6	Protection Class IP68
7	Module type (AQS-MBOC)
8	INTEGRA Metering Address
9	Module Serial number
10	NFC antenna
11	Product name
12	Recycling logo
13	Communication Interface M-Bus and Pulses

3.6 QR-Code Format

The QR-Code used on the communication modules contains the following information:

- Serial number of the module
- Module type: AQS-MB, AQS-W8, AQS-L8 or AQS-MBOC
- Article number Integra Metering

It is constructed in the following way with semicolon separator:

aquastream® M-Bus	aquastream® M-Bus/Pulses
 XXXXXXXX; AQS-MB; 97506	 XXXXXXXX; AQS-MBOC; 97508
aquastream® Radio W8	aquastream® Radio L8
 XXXXXXXX; AQS-W8; 97507	 XXXXXXXX; AQS-L8; 97509

4. Storage

The product can be stored in a dry place at temperatures between -20 °C and +70 °C for up to one year.

INDICATION



Longer storage at high temperatures can result in a considerable loss of battery life.

5. Installation

The aquastream® module must be correctly installed on the water meter.

RÉFÉRENCE



You will find detailed instructions in the "Installation Instructions" enclosed with each product package.

After mounting the aquastream® module on the meter, the device must be configured.

INDICATION



The product is not intended to be installed at a height of 2m or more.

6. Wired connection / Radio connectivity

6.1 M-Bus interface

The two-wire wired interface allows the module to be connected to an **M-Bus (Meter-Bus)** communication system to ensure **automatic data reading**.

When this interface is used, the module must be specifically **configured for operation in M-Bus mode**. This configuration ensures compatibility with the host system, proper data exchange and reliable communication.

Before commissioning, it is recommended to check the communication parameters (mode, address, transmission speed, etc.) in accordance with the requirements of the M-Bus network used.

6.2 M-Bus/Pulses interface

The five-wire wired interface allows **two separate systems to be connected simultaneously**, operating in parallel without interference between them.

This interface supports:

- an **M-Bus interface**, designed for automatic data reading via a remote reading system,
- a **configurable pulse interface**, enabling the transmission of information in the form of pulses to an external system (PLC, recorder, supervision system, etc.).

The parallel operation of these two interfaces allows several communication modes to be used simultaneously, offering increased **flexibility for integration** into different environments and system architectures.

The module must be configured appropriately to ensure that each interface operates correctly according to the requirements of the connected systems.

6.3 Wireless M-Bus communication

The module operates with a **preconfigured WM-Bus radio transmission**, in accordance with the defined communication mode.

After the configuration phase, the module **automatically transmits data by radio at regular intervals**, every 16 seconds, without user intervention.

The transmitted information can be **received and read using a WM-Bus receiver operating on the 868 MHz frequency band in T1 mode**.

This communication mode enables **reliable and continuous data collection**, suitable for remote reading and remote monitoring applications.

6.4 LoRaWAN communication

The module operates using **LoRaWAN technology on the EU868 frequency band**.

After the configuration phase, the module **automatically transmits data to the LoRaWAN network**, with a transmission frequency of **two transmissions per day**, without user intervention.

In order to ensure reliable communication, it is **essential to check the LoRaWAN network coverage at the module's installation site**. This check can be carried out using a **LoRaWAN tester** or any other equivalent tool before final installation.


Important notes:

- If the **LoRaWAN operator changes during the module's lifetime**, it is necessary to **restart the 'Join' procedure directly on the module using the IM Connect+ software**. This operation cannot be performed remotely.
- If the **first connection to the LoRaWAN network (join procedure) fails**, it is recommended that **you try again in a location with better radio coverage**, such as outdoors or near an open area.

Following these recommendations will ensure **reliable commissioning** and optimal operation of the module on the LoRaWAN network.

7. Connection

7.1 aquastream® M-Bus Connection


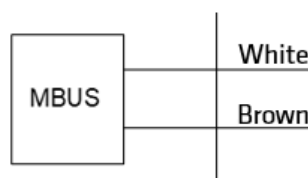


7.2 aquastream® M-Bus/Pulses Connection

A laser marking is available on the side of the AQS-MBOC module detailing the functions and wires.

M-Bus output :	White - Brown
Pulse output :	Func1 Green
	Func2 Yellow
	GND Grey

The aquastream® M-Bus/Pulses module has a 5-wire cable for the interfaces: M-Bus and Pulses.

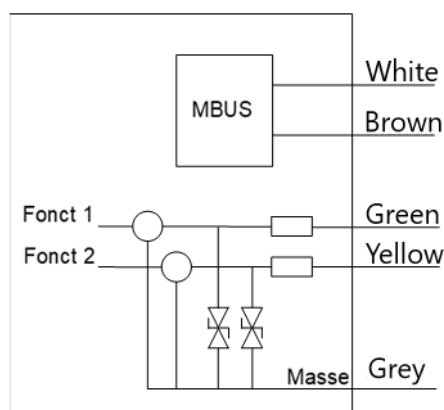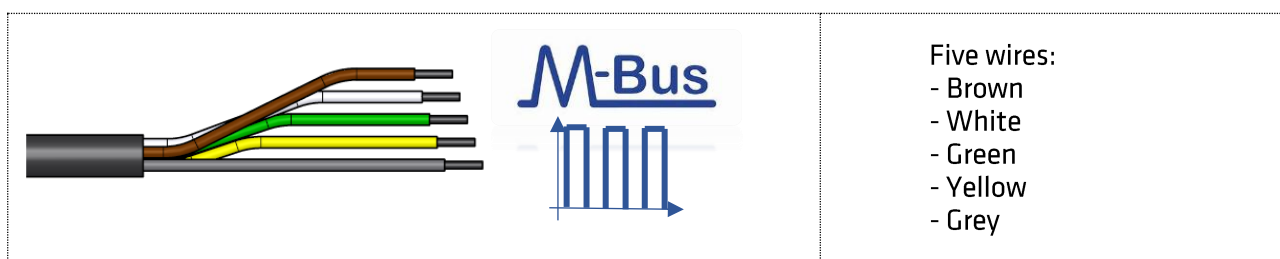

WARNING



The M-Bus interface as well as the pulse interface work with low signals and voltages. Observe the connection instructions in terms of voltage, current and max. power: max. Power 36mW, max. Current 10mA, max. Voltage 3.6V. Errors in the connections could lead to the destruction of the device.


CAUTION



The M-Bus output and the pulse output are not galvanically isolated. If the pulse output and the M-Bus output are used simultaneously, it must be ensured that there is a galvanic separation between the 2 connected systems.


7.2.1 M-Bus Output




M-Bus Output is defined as following:

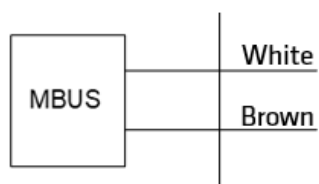

7.2.2 Pulses Output

   The pulse output is fully configurable using IM Connect+® as shown in the table below:

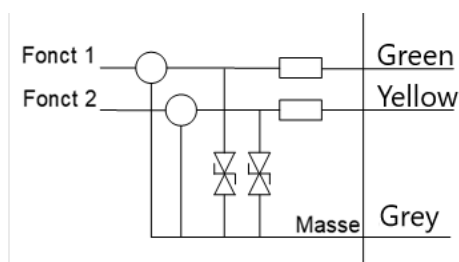


 	2 wires – with compensation - Green : PULSE - Grey : GND
Compensation mode: Compensated pulse output (return volume pulses are compensated by suppressing the same number of forward volume pulses).  	3 wires – with direction wire - Green : PULSE - Yellow : DIRECTION - Grey : GND
Mode with direction: Direction of flow (a ground signal corresponds to a negative flow).  	3 wires – Positive/Negative - Green : PULSE + - Yellow : PULSE - - Grey : GND
Positive/Negative Mode: Allows you to accurately count positive (normal direction) and negative (return water) water volumes.  	3 wires – duplicate pulses output - Green : PULSE 1 - Yellow : PULSE 2 - Grey : GND

7.2.3 Pulses Output Schematics

The pulses output is an Open Collector type with the following characteristics:

- Possible Voltage V: 3,6V to 48V max.
- Current max. 10mA
- RLoad (external - mandatory) ~ 1Kohms

Each output (Green and Yellow) shall be connected as following:

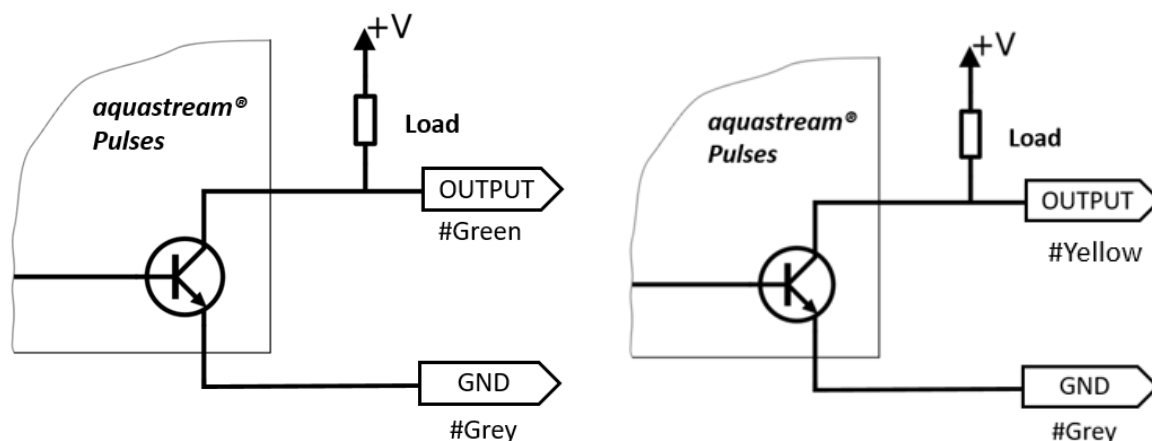


7.3 Features

7.3.1 Leakage Alarm

The module checks whether the average consumption over 30 minutes for 24 consecutive hours has always been higher than the threshold value (50 l/h for a DN15 meter).

The alarm is only activated if the threshold value has always been exceeded within 24 hours (otherwise, the module restarts the calculation of the 24 hours from the beginning).

Once the leak has been corrected, the alarm is automatically reset after 30 minutes.

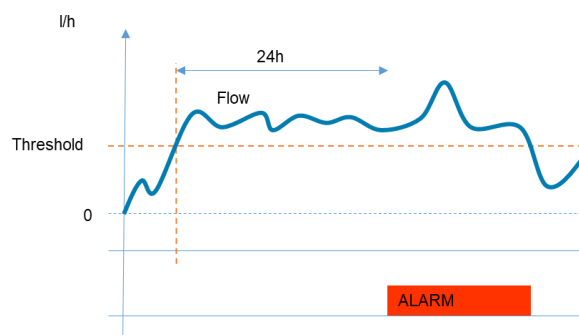


The factory setting is defined as following:

DN15	DN20	DN25	DN32	DN40	DN50
50 l/h	80 l/h	126 l/h	200 l/h	320 l/h	500 l/h

7.3.2 Backflow Alarm

The module analyses the direction of water flow. If it detects a consecutive negative water volume below the threshold value (13 l for a DN15 meter), the alarm is activated.

The alarm can only be reset via NFC using the IM Connect+® application.

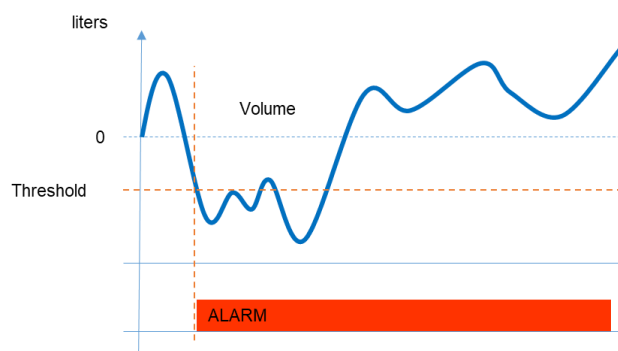


The factory setting is defined as following:

DN15	DN20	DN25	DN32	DN40	DN50
13 liters	20 liters	32 liters	50 liters	80 liters	125 liters

7.3.3 Burst Alarm

The module analyses the instantaneous flow rate. If it detects a high and fast flow rate (peak flow) above the threshold value (3 875 l/h for DN15), the alarm is activated immediately.

The alarm can only be reset via NFC using the IM Connect+® application.

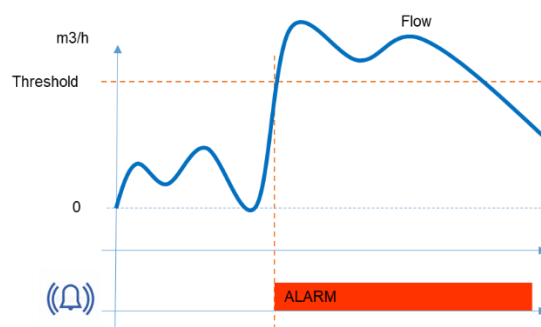


The factory setting is defined as following:

DN15	DN20	DN25	DN32	DN40	DN50
3 875 l/h	6 200 l/h	9 765 l/h	15 500 l/h	24 800 l/h	38 750 l/h

7.3.4 Over Load Alarm

The module analyses the instantaneous flow rate. If it detects a flow rate higher than the threshold value (3125 l/h for DN15) for more than 30min, the alarm is activated.

The alarm can only be reset via NFC using the IM Connect+® application.

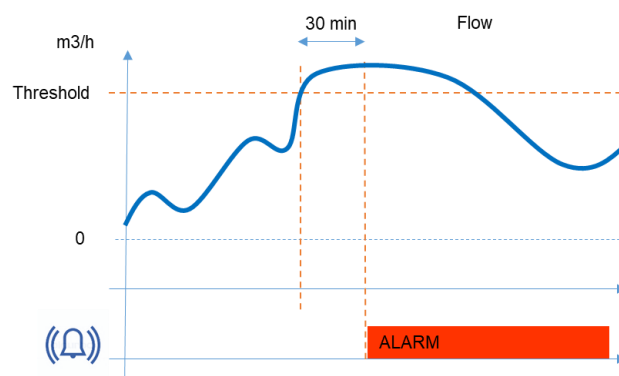

The factory setting is defined as following:

DN15	DN20	DN25	DN32	DN40	DN50
3 125 l/h	5 000 l/h	7 875 l/h	12 500 l/h	20 000 l/h	31 250 l/h

7.3.5 Data Logger

The aquastream® modules are equipped with a memory for storing values automatically.

It allows the management of the following histories:

- Start and end of event and alarms (date + event type)
- Index values (index and date) : yearly, monthly, daily and hourly

The capacity of the Datalogger memory are the following:

Version	Capacity
AQS-MB	12 monthly values (end of month)
AQS-MBOC	16 yearly values (end of year) – 48 monthly values (end of month) – 460 daily values (end of day) – 24 hourly values (last 24 hours)
AQS-W8	16 yearly values (end of year) – 48 monthly values (end of month) – 460 daily values (end of day) – 24 hourly values (last 24 hours)
AQS-L8	16 yearly values (end of year) – 48 monthly values (end of month) – 460 daily values (end of day) – 24 hourly values (last 24 hours)

These values can be read and downloaded with IM Connect+®.

8. Configuration of the aquastream® modules

Initial configuration or any subsequent modifications to the aquastream® range of modules must be carried out with the IM Connect+® configuration software via the NFC sensor.

8.1 IM Connect+® Activation and Starting

IM Connect+® software must be properly installed on your smartphone. It is available on Google Play or on the App Store and can be downloaded there directly and freely.

REFERENCE



IM Connect+® configuration software can be downloaded directly by clicking on the following link or by scanning the corresponding QR Code:



[Link](#)



[Link](#)


REFERENCE



For more information on IM Connect+® software, please refer to the IM Connect+® User Guide available on our website.

8.1.1. Starting the configuration Software

Click on the following icon to start the configuration software "IM Connect+®".

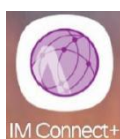


8.1.2. Software Activation

To activate the software and access the configuration features, you must enter your activation key.


To do this, scan the activation key you received and enter your associated First and Last Name.

In the menu: Settings → Activation key → Enter activation key

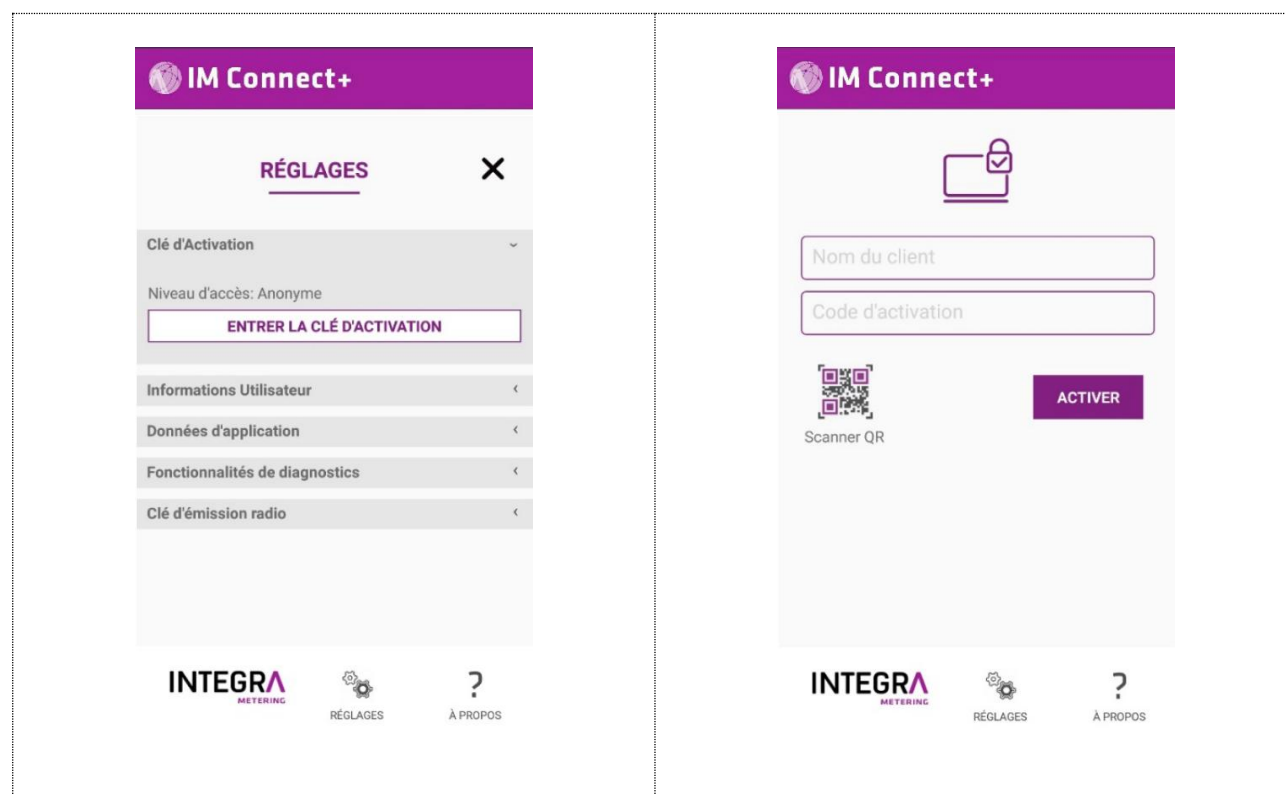


Enter your name followed by your company and then click the "Scan QR" button. In this case, you must authorize access to the camera to start the QR-Code scan. Then click on the "Activate" button.

The summary concerning your license can be viewed in "User Information".

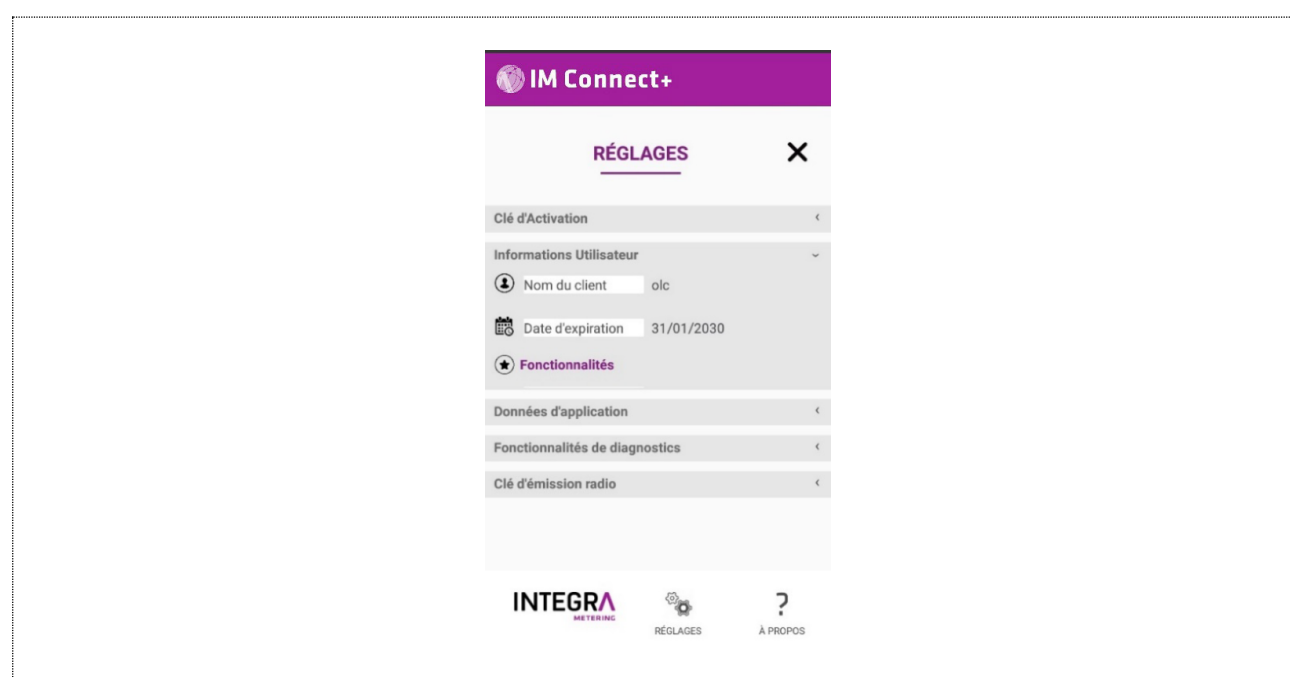

8.2 Scanning aquastream® module


Click the "Scan Device" button to start an NFC scan, and then place your smartphone in the location of the NFC antenna.

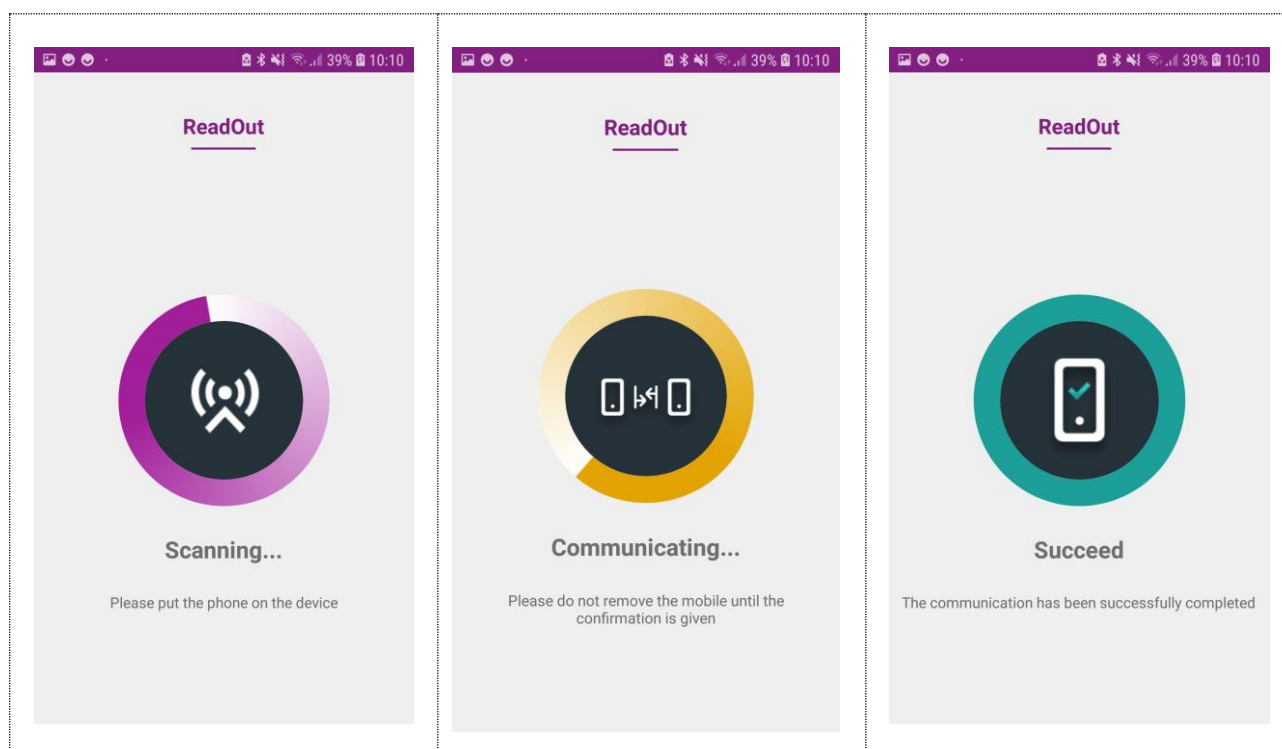

NOTE



It is necessary to know the location of the NFC interface of your smartphone to have a good communication between the device to be configured and the smartphone.

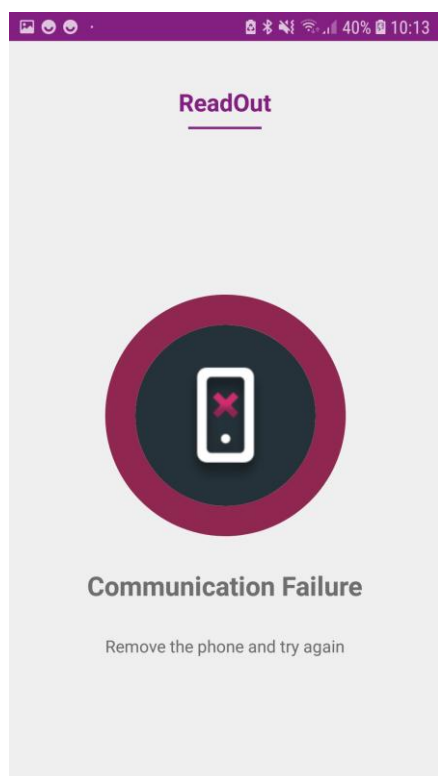

In the case of the "Communication failure" message, you must remove the smartphone and then put it back on to restart the scan.

Verify:


- The position of your Smartphone/NFC in relation to the meter/module

8.3 Different Information types

On the main screen, different types of information are accessible, such as:

- Main values,
- Events,
- The data history.

Depending on the type of meter/module, its version as well as the communication interface, the displayed and available data may vary more or less.

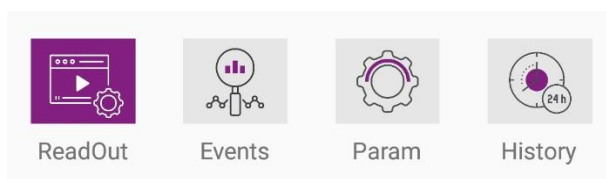

8.4 Display of values

Click on the "Reading" menu to access the different information of the meter and the communication module.

INDICATION



The parameters displayed in this menu depend on the type of modules (M-Bus, Radio W8, Radio L8 or M-Bus/Pulses) being scanned.

8.4.1 Display of values aquastream® M-Bus

The available data are organized by group as shown in the examples below.

	Module information <table> <tr><td colspan="2">▼ aquastream</td></tr> <tr><td>NFC Tag Id</td><td>48894CA8E5180</td></tr> <tr><td>aquastream SN</td><td>1000080</td></tr> <tr><td>Device Name</td><td>aquastream wired M-BUS</td></tr> <tr><td>Operation Time (days)</td><td>146.18:01:25</td></tr> <tr><td>Device Time</td><td>04/08/2020 10:17</td></tr> <tr><td>Battery life time (years)</td><td>15.60</td></tr> <tr><td>Firmware Version</td><td>111</td></tr> </table>	▼ aquastream		NFC Tag Id	48894CA8E5180	aquastream SN	1000080	Device Name	aquastream wired M-BUS	Operation Time (days)	146.18:01:25	Device Time	04/08/2020 10:17	Battery life time (years)	15.60	Firmware Version	111														
▼ aquastream																															
NFC Tag Id	48894CA8E5180																														
aquastream SN	1000080																														
Device Name	aquastream wired M-BUS																														
Operation Time (days)	146.18:01:25																														
Device Time	04/08/2020 10:17																														
Battery life time (years)	15.60																														
Firmware Version	111																														
	M-Bus output information <table> <tr><td colspan="2">▼ MBus</td></tr> <tr><td>Primary Address</td><td>0</td></tr> <tr><td>Index Unit</td><td>I</td></tr> <tr><td>Baudrate</td><td>2400</td></tr> </table>	▼ MBus		Primary Address	0	Index Unit	I	Baudrate	2400																						
▼ MBus																															
Primary Address	0																														
Index Unit	I																														
Baudrate	2400																														
Meter information <table> <tr><td colspan="2">▼ Meter</td></tr> <tr><td>Meter SN</td><td>123</td></tr> <tr><td>Index (m3)</td><td>0.000</td></tr> <tr><td>Reverse Index (m3)</td><td>0.000</td></tr> <tr><td>Flow (l/h)</td><td>0</td></tr> <tr><td>Max Flow (l/h)</td><td>0</td></tr> <tr><td>Customer text field</td><td></td></tr> <tr><td>Diameter ⁽ⁱ⁾</td><td>Unspecified</td></tr> </table>	▼ Meter		Meter SN	123	Index (m3)	0.000	Reverse Index (m3)	0.000	Flow (l/h)	0	Max Flow (l/h)	0	Customer text field		Diameter ⁽ⁱ⁾	Unspecified	Alarms information <table> <tr><td colspan="2">▼ Alerts</td></tr> <tr><td>Tamper ⁽ⁱ⁾</td><td>No Alarm</td></tr> <tr><td>Overload ⁽ⁱ⁾</td><td>No Alarm</td></tr> <tr><td>Leakage ⁽ⁱ⁾</td><td>No Alarm</td></tr> <tr><td>Low Battery ⁽ⁱ⁾</td><td>No Alarm</td></tr> <tr><td>Reverse Flow ⁽ⁱ⁾</td><td>No Alarm</td></tr> <tr><td>Burst ⁽ⁱ⁾</td><td>No Alarm</td></tr> </table>	▼ Alerts		Tamper ⁽ⁱ⁾	No Alarm	Overload ⁽ⁱ⁾	No Alarm	Leakage ⁽ⁱ⁾	No Alarm	Low Battery ⁽ⁱ⁾	No Alarm	Reverse Flow ⁽ⁱ⁾	No Alarm	Burst ⁽ⁱ⁾	No Alarm
▼ Meter																															
Meter SN	123																														
Index (m3)	0.000																														
Reverse Index (m3)	0.000																														
Flow (l/h)	0																														
Max Flow (l/h)	0																														
Customer text field																															
Diameter ⁽ⁱ⁾	Unspecified																														
▼ Alerts																															
Tamper ⁽ⁱ⁾	No Alarm																														
Overload ⁽ⁱ⁾	No Alarm																														
Leakage ⁽ⁱ⁾	No Alarm																														
Low Battery ⁽ⁱ⁾	No Alarm																														
Reverse Flow ⁽ⁱ⁾	No Alarm																														
Burst ⁽ⁱ⁾	No Alarm																														


8.4.2 Display of Values aquastream® Radio W8 (Wireless M-Bus)

The available data are organized by group as shown in the examples below.

ReadOut Events Param History DEVICE Latest Read Date: 04/08/2020 10:43:06 - aquastream - Meter - Wireless MBus - Alerts	Module information <table border="1"> <thead> <tr> <th colspan="2">▼ aquastream</th> </tr> </thead> <tbody> <tr> <td>NFC Tag Id</td> <td>44795CA8E5180</td> </tr> <tr> <td>aquastream SN</td> <td>10000123</td> </tr> <tr> <td>Device Name</td> <td>aquastream wireless M-BUS</td> </tr> <tr> <td>Operation Time (days)</td> <td>249.22:40:25</td> </tr> <tr> <td>Device Time</td> <td>02/08/2020 21:35</td> </tr> <tr> <td>Battery life time (years)</td> <td>15.32</td> </tr> <tr> <td>Firmware Version</td> <td>63</td> </tr> </tbody> </table> Radio interface information <table border="1"> <thead> <tr> <th colspan="2">▼ Wireless MBus</th> </tr> </thead> <tbody> <tr> <td>RF Status</td> <td>On</td> </tr> <tr> <td>Index Unit</td> <td>I</td> </tr> </tbody> </table>	▼ aquastream		NFC Tag Id	44795CA8E5180	aquastream SN	10000123	Device Name	aquastream wireless M-BUS	Operation Time (days)	249.22:40:25	Device Time	02/08/2020 21:35	Battery life time (years)	15.32	Firmware Version	63	▼ Wireless MBus		RF Status	On	Index Unit	I						
▼ aquastream																													
NFC Tag Id	44795CA8E5180																												
aquastream SN	10000123																												
Device Name	aquastream wireless M-BUS																												
Operation Time (days)	249.22:40:25																												
Device Time	02/08/2020 21:35																												
Battery life time (years)	15.32																												
Firmware Version	63																												
▼ Wireless MBus																													
RF Status	On																												
Index Unit	I																												
Meter information <table border="1"> <thead> <tr> <th colspan="2">▼ Meter</th> </tr> </thead> <tbody> <tr> <td>Meter SN</td> <td>11111111</td> </tr> <tr> <td>Index (m3)</td> <td>1.366</td> </tr> <tr> <td>Reverse Index (m3)</td> <td>0.000</td> </tr> <tr> <td>Flow (l/h)</td> <td>0</td> </tr> <tr> <td>Max Flow (l/h)</td> <td>300</td> </tr> <tr> <td>Diameter⁽ⁱ⁾</td> <td>DN 20</td> </tr> </tbody> </table>	▼ Meter		Meter SN	11111111	Index (m3)	1.366	Reverse Index (m3)	0.000	Flow (l/h)	0	Max Flow (l/h)	300	Diameter ⁽ⁱ⁾	DN 20	Alarms information <table border="1"> <thead> <tr> <th colspan="2">▼ Alerts</th> </tr> </thead> <tbody> <tr> <td>Tamper⁽ⁱ⁾</td> <td>No Alarm</td> </tr> <tr> <td>Overload⁽ⁱ⁾</td> <td>No Alarm</td> </tr> <tr> <td>Leakage⁽ⁱ⁾</td> <td>No Alarm</td> </tr> <tr> <td>Low Battery⁽ⁱ⁾</td> <td>No Alarm</td> </tr> <tr> <td>Reverse Flow⁽ⁱ⁾</td> <td>No Alarm</td> </tr> <tr> <td>Burst⁽ⁱ⁾</td> <td>No Alarm</td> </tr> </tbody> </table>	▼ Alerts		Tamper ⁽ⁱ⁾	No Alarm	Overload ⁽ⁱ⁾	No Alarm	Leakage ⁽ⁱ⁾	No Alarm	Low Battery ⁽ⁱ⁾	No Alarm	Reverse Flow ⁽ⁱ⁾	No Alarm	Burst ⁽ⁱ⁾	No Alarm
▼ Meter																													
Meter SN	11111111																												
Index (m3)	1.366																												
Reverse Index (m3)	0.000																												
Flow (l/h)	0																												
Max Flow (l/h)	300																												
Diameter ⁽ⁱ⁾	DN 20																												
▼ Alerts																													
Tamper ⁽ⁱ⁾	No Alarm																												
Overload ⁽ⁱ⁾	No Alarm																												
Leakage ⁽ⁱ⁾	No Alarm																												
Low Battery ⁽ⁱ⁾	No Alarm																												
Reverse Flow ⁽ⁱ⁾	No Alarm																												
Burst ⁽ⁱ⁾	No Alarm																												

8.4.3 Display of Values aquastream® M-Bus/Pulses

The available data are organized by group as shown in the examples below.

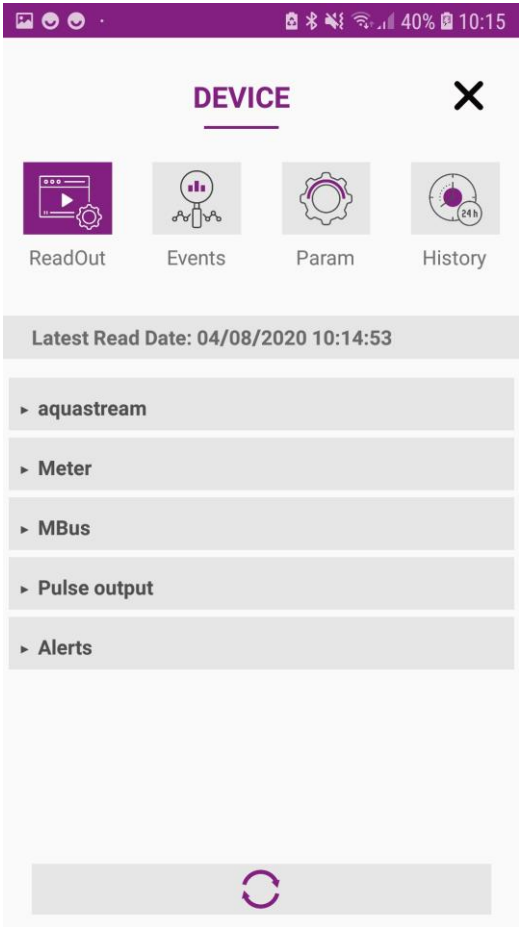	Module Information <table> <tr><td colspan="2">▼ aquastream</td></tr> <tr><td>NFC Tag Id</td><td>45F8AD2CD5280</td></tr> <tr><td>aquastream SN</td><td>10011719</td></tr> <tr><td>Device Name</td><td>aquastream wired</td></tr> <tr><td>Operation Time (days)</td><td>26.23:28:57</td></tr> <tr><td>Device Time</td><td>04/08/2020 09:17</td></tr> <tr><td>Battery life time (years)</td><td>15.93</td></tr> <tr><td>Firmware Version</td><td>67</td></tr> <tr><td>Hardware Version</td><td>1</td></tr> </table>	▼ aquastream		NFC Tag Id	45F8AD2CD5280	aquastream SN	10011719	Device Name	aquastream wired	Operation Time (days)	26.23:28:57	Device Time	04/08/2020 09:17	Battery life time (years)	15.93	Firmware Version	67	Hardware Version	1						
▼ aquastream																									
NFC Tag Id	45F8AD2CD5280																								
aquastream SN	10011719																								
Device Name	aquastream wired																								
Operation Time (days)	26.23:28:57																								
Device Time	04/08/2020 09:17																								
Battery life time (years)	15.93																								
Firmware Version	67																								
Hardware Version	1																								
Meter information <table> <tr><td colspan="2">▼ Meter</td></tr> <tr><td>Meter SN</td><td>0</td></tr> <tr><td>Index (m3)</td><td>0.000</td></tr> <tr><td>Reverse Index (m3)</td><td>0.000</td></tr> <tr><td>Flow (l/h)</td><td>0</td></tr> <tr><td>Max Flow (l/h)</td><td>0</td></tr> <tr><td>Customer text field</td><td></td></tr> <tr><td>Diameter ⁽ⁱ⁾</td><td>Unspecified</td></tr> </table>	▼ Meter		Meter SN	0	Index (m3)	0.000	Reverse Index (m3)	0.000	Flow (l/h)	0	Max Flow (l/h)	0	Customer text field		Diameter ⁽ⁱ⁾	Unspecified	M-Bus output information <table> <tr><td colspan="2">▼ MBus</td></tr> <tr><td>Primary Address</td><td>1</td></tr> <tr><td>Index Unit</td><td>l</td></tr> <tr><td>Baudrate</td><td>2400</td></tr> </table>	▼ MBus		Primary Address	1	Index Unit	l	Baudrate	2400
▼ Meter																									
Meter SN	0																								
Index (m3)	0.000																								
Reverse Index (m3)	0.000																								
Flow (l/h)	0																								
Max Flow (l/h)	0																								
Customer text field																									
Diameter ⁽ⁱ⁾	Unspecified																								
▼ MBus																									
Primary Address	1																								
Index Unit	l																								
Baudrate	2400																								

Pulses output information	Alarms information																		
▼ Pulse output <table> <tr> <td>Output Mode</td><td>PULSE / GND (Compensation)</td></tr> <tr> <td>Pulse weight (l)</td><td>1</td></tr> <tr> <td>Pulse Length (ms)</td><td>30</td></tr> </table>	Output Mode	PULSE / GND (Compensation)	Pulse weight (l)	1	Pulse Length (ms)	30	▼ Alerts <table> <tr> <td>Tamper</td><td>(i) No Alarm</td></tr> <tr> <td>Overload</td><td>(i) No Alarm</td></tr> <tr> <td>Leakage</td><td>(i) No Alarm</td></tr> <tr> <td>Low Battery</td><td>(i) No Alarm</td></tr> <tr> <td>Reverse Flow</td><td>(i) No Alarm</td></tr> <tr> <td>Burst</td><td>(i) No Alarm</td></tr> </table>	Tamper	(i) No Alarm	Overload	(i) No Alarm	Leakage	(i) No Alarm	Low Battery	(i) No Alarm	Reverse Flow	(i) No Alarm	Burst	(i) No Alarm
Output Mode	PULSE / GND (Compensation)																		
Pulse weight (l)	1																		
Pulse Length (ms)	30																		
Tamper	(i) No Alarm																		
Overload	(i) No Alarm																		
Leakage	(i) No Alarm																		
Low Battery	(i) No Alarm																		
Reverse Flow	(i) No Alarm																		
Burst	(i) No Alarm																		

8.4.4 Display of Values aquastream® Radio L8 (LoRaWAN)

The available data are organized by group as shown in the examples below.

	Module information ▼ aquastream <table> <tr> <td>NFC Tag Id</td><td>4CD7CD2767280</td></tr> <tr> <td>aquastream SN</td><td>99999999</td></tr> <tr> <td>Device Name</td><td>Aquastream Lora</td></tr> <tr> <td>Operation Time (days)</td><td>14.23:22:40</td></tr> <tr> <td>Device Time</td><td>3/1/2022 18:34</td></tr> <tr> <td>Battery life time (years)</td><td>15.96</td></tr> <tr> <td>NFC Protection</td><td>Not Protected</td></tr> <tr> <td>Firmware Version</td><td>2.02</td></tr> <tr> <td>Firmware Version Tag</td><td>20214180</td></tr> <tr> <td>Hardware Version</td><td>1</td></tr> </table>	NFC Tag Id	4CD7CD2767280	aquastream SN	99999999	Device Name	Aquastream Lora	Operation Time (days)	14.23:22:40	Device Time	3/1/2022 18:34	Battery life time (years)	15.96	NFC Protection	Not Protected	Firmware Version	2.02	Firmware Version Tag	20214180	Hardware Version	1
NFC Tag Id	4CD7CD2767280																				
aquastream SN	99999999																				
Device Name	Aquastream Lora																				
Operation Time (days)	14.23:22:40																				
Device Time	3/1/2022 18:34																				
Battery life time (years)	15.96																				
NFC Protection	Not Protected																				
Firmware Version	2.02																				
Firmware Version Tag	20214180																				
Hardware Version	1																				
	Radio interface information ▼ LoRa <table> <tr> <td>Reference hour</td><td>00:00</td></tr> <tr> <td>Send hour</td><td>00:00</td></tr> <tr> <td>Send Period</td><td>00:00</td></tr> <tr> <td>Dev EUI</td><td>0000000000000000</td></tr> <tr> <td>Join EUI</td><td>0000000000000000</td></tr> </table>	Reference hour	00:00	Send hour	00:00	Send Period	00:00	Dev EUI	0000000000000000	Join EUI	0000000000000000										
Reference hour	00:00																				
Send hour	00:00																				
Send Period	00:00																				
Dev EUI	0000000000000000																				
Join EUI	0000000000000000																				

Meter information	Alarms information																								
▼ Meter <table> <tr> <td>Meter SN</td><td>11111111</td></tr> <tr> <td>Index (m3)</td><td>1.366</td></tr> <tr> <td>Reverse Index (m3)</td><td>0.000</td></tr> <tr> <td>Flow (l/h)</td><td>0</td></tr> <tr> <td>Max Flow (l/h)</td><td>300</td></tr> <tr> <td>Diameter ⁽ⁱ⁾</td><td>DN 20</td></tr> </table>	Meter SN	11111111	Index (m3)	1.366	Reverse Index (m3)	0.000	Flow (l/h)	0	Max Flow (l/h)	300	Diameter ⁽ⁱ⁾	DN 20	▼ Alerts <table> <tr> <td>Tamper ⁽ⁱ⁾</td><td>No Alarm</td></tr> <tr> <td>Overload ⁽ⁱ⁾</td><td>No Alarm</td></tr> <tr> <td>Leakage ⁽ⁱ⁾</td><td>No Alarm</td></tr> <tr> <td>Low Battery ⁽ⁱ⁾</td><td>No Alarm</td></tr> <tr> <td>Reverse Flow ⁽ⁱ⁾</td><td>No Alarm</td></tr> <tr> <td>Burst ⁽ⁱ⁾</td><td>No Alarm</td></tr> </table>	Tamper ⁽ⁱ⁾	No Alarm	Overload ⁽ⁱ⁾	No Alarm	Leakage ⁽ⁱ⁾	No Alarm	Low Battery ⁽ⁱ⁾	No Alarm	Reverse Flow ⁽ⁱ⁾	No Alarm	Burst ⁽ⁱ⁾	No Alarm
Meter SN	11111111																								
Index (m3)	1.366																								
Reverse Index (m3)	0.000																								
Flow (l/h)	0																								
Max Flow (l/h)	300																								
Diameter ⁽ⁱ⁾	DN 20																								
Tamper ⁽ⁱ⁾	No Alarm																								
Overload ⁽ⁱ⁾	No Alarm																								
Leakage ⁽ⁱ⁾	No Alarm																								
Low Battery ⁽ⁱ⁾	No Alarm																								
Reverse Flow ⁽ⁱ⁾	No Alarm																								
Burst ⁽ⁱ⁾	No Alarm																								

7.5 Events and Alarms

The events and alarms are stored in the counter/module and it can be read by this menu.

DEVICE X

ReadOut Events Param History

Latest Read Date: 04/08/2020 11:10:54

E4	Information	Fuite	02/12/2019	08:25
E10	Information	Retour d'eau	30/11/2019	14:30
E4	Information	Fuite	30/11/2019	14:30
E10	Information	Retour d'eau	28/11/2019	08:47
E1	Attention	Manipulation	28/11/2019	08:47
E4	Information	Fuite	22/11/2019	16:30
E4	Information	Fuite	22/11/2019	15:15
E1	Attention	Manipulation	19/11/2019	15:02
	Informa-			


Refresh icon

This function reads all the events stored in the module/counters, such as alarms, malfunctions...

8.6 Historic (Data Logger)

Datalogger functions are available in some meters/module and can be accessed via this menu.

This function allows you to view all the historical values stored in the modules.

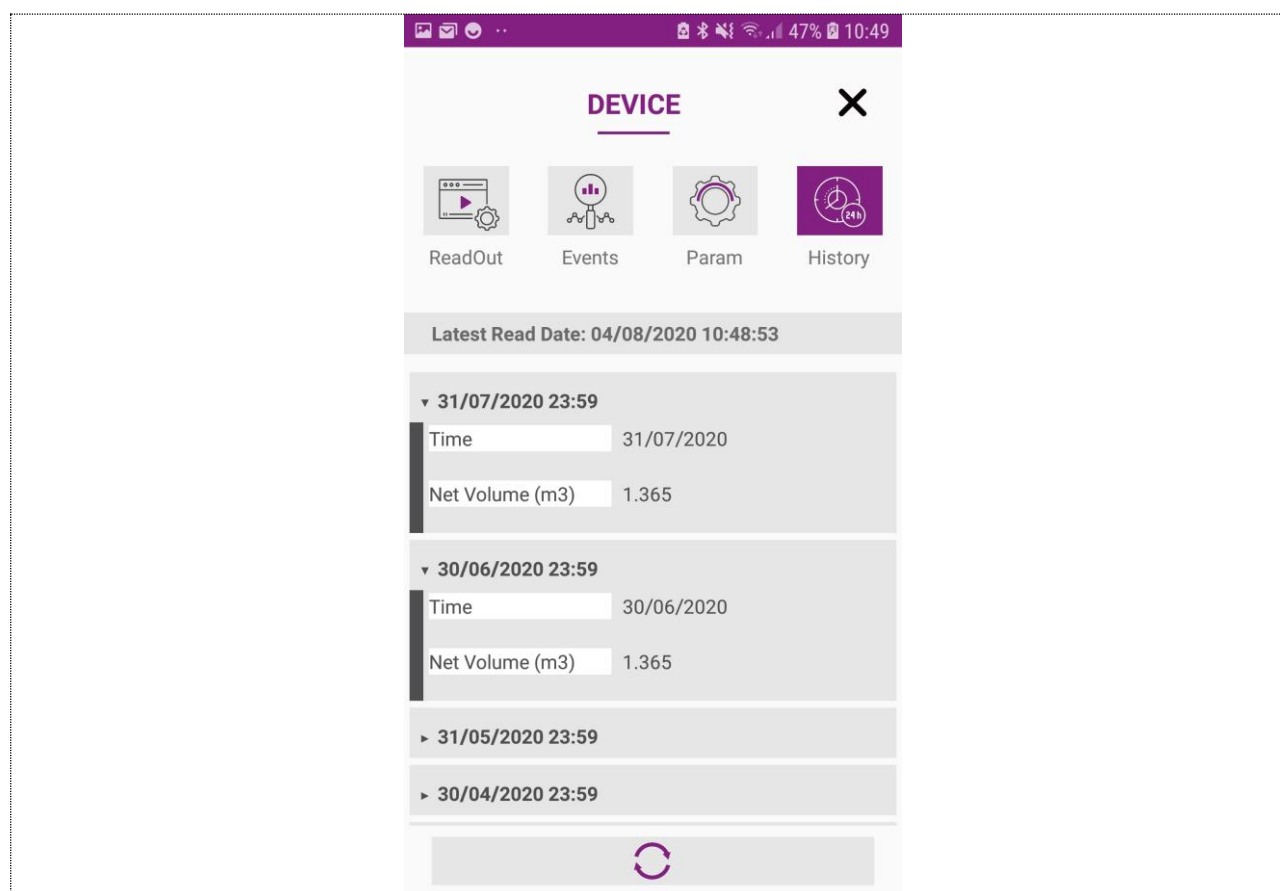

8.7 Modification of the values

To access the configuration view, click on the "Settings" menu.

INDICATION



The parameters that can be modified in this menu depending on the type of modules (M-Bus, Radio or M-Bus/Pulses) being scanned.

8.7.1 aquastream® M-Bus modification

NOTE



Knowledge of the M-Bus protocol is necessary to define the parameters of the module.

The available data are organized by group as shown in the examples below.

Configuration of meter information

The mandatory information is:

- The meter number
- The meter index
- The diameter of the meter

▼ Meter		
Meter SN	123	12345678
Index to set (m3) ⁽ⁱ⁾	0.000	0.250
Customer text field		
Diameter ⁽ⁱ⁾	Unspecified	DN 15


Configuration of M-Bus output

▼ MBus		
Primary Address	0	1
Index Unit	I	
Baudrate	2400	

INDICATION



Changing the index resets all alarms, initializes the negative volume and synchronizes the date and time with that of your smartphone.

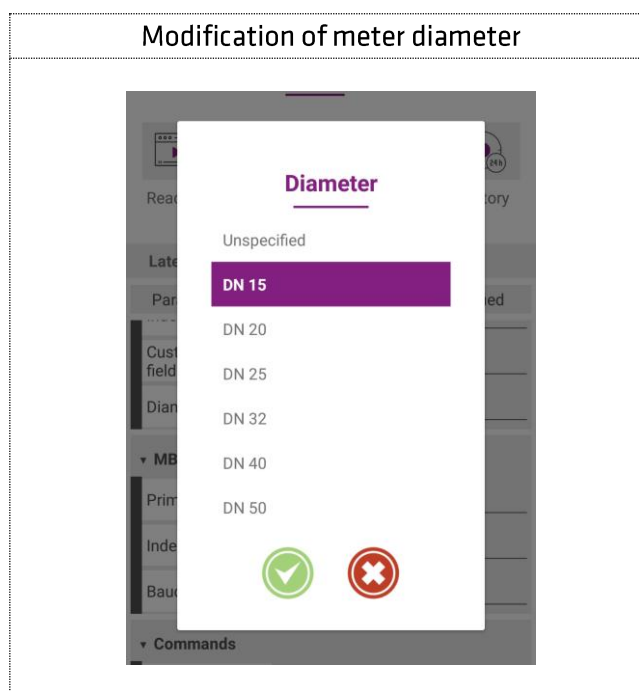
INDICATION


If the meter diameter is not specified, the management of Burst, Leak and Return water alarms is not operational.

INDICATION


The alarm thresholds for Burst, Leak and Return water detection are automatically updated when the diameter of the meter is changed and are reset to the default value.

INDICATION


The analysis of the fraud alarm only starts when the module has detected a volume of water greater than 5 litres.

Additional functions are available such:

- Set the time,
- Delete the histories stored in the module,
- Initialize alarms,
- Changing predefined alarm values.

Special commands	Configuration of alarms														
▼ Commands Reset No	▼ Alerts <table> <tr><td>Reset Tamper</td><td>No</td></tr> <tr><td>Reset Reverse flow</td><td>No</td></tr> <tr><td>Reset Maxflow</td><td>No</td></tr> <tr><td>Reset Overload</td><td>No</td></tr> <tr><td>Reset Burst</td><td>No</td></tr> <tr><td>Leak threshold (l/h)</td><td>50</td></tr> <tr><td>Overload threshold (l/h)</td><td>3125</td></tr> </table>	Reset Tamper	No	Reset Reverse flow	No	Reset Maxflow	No	Reset Overload	No	Reset Burst	No	Leak threshold (l/h)	50	Overload threshold (l/h)	3125
Reset Tamper	No														
Reset Reverse flow	No														
Reset Maxflow	No														
Reset Overload	No														
Reset Burst	No														
Leak threshold (l/h)	50														
Overload threshold (l/h)	3125														

8.7.2 aquastream® Radio W8 (Wireless M-Bus) modification

NOTE



Knowledge of Wireless M-Bus communication is necessary to define the parameters of the module.

The available data are organized by group as shown in the examples below:

	Configuration of meter information						
	The mandatory information is: - The meter number - The meter index - The diameter of the meter ▼ Meter <table> <tr><td>Meter SN</td><td>11111111</td></tr> <tr><td>Index to set (m3)⁽ⁱ⁾</td><td>1.366</td></tr> <tr><td>Diameter⁽ⁱ⁾</td><td>DN 20</td></tr> </table>	Meter SN	11111111	Index to set (m3) ⁽ⁱ⁾	1.366	Diameter ⁽ⁱ⁾	DN 20
Meter SN	11111111						
Index to set (m3) ⁽ⁱ⁾	1.366						
Diameter ⁽ⁱ⁾	DN 20						

Configuration of the Radio M-Bus interface

▼ Wireless MBus

RF Status	On	
Index Unit	I	
AES Key	*****	*****

INDICATION



Changing the index resets all alarms, initializes the negative volume and synchronizes the date and time with that of your smartphone.

Configuration of meter diameter

Diameter

Unspecified

DN 15

DN 20

DN 25

DN 32

DN 40

DN 50

INDICATION



If the meter diameter is not specified, the management of Burst, Leak and Return water alarms is not operational.

INDICATION



The alarm thresholds for Burst, Leak and Return water detection are automatically updated when the diameter of the meter is changed and are reset to the default value.

INDICATION



The analysis of the fraud alarm only starts when the module has detected a volume of water greater than 5 litres.

Additional functions are available such:

- Set the time,
- Delete the histories stored in the module,
- Initialize alarms,
- Changing predefined alarm values.

Special commandes	Configuration of alarms
▼ Commands Reset No	▼ Alerts Reset Tamper No Reset Reverse flow No Reset Maxflow No Reset Overload No Reset Burst No Leak threshold (l/h) 50 Overload threshold (l/h) 3125

8.7.3 aquastream® M-Bus/Pulses modification

NOTE



Knowledge of M-Bus communication and pulse signals is necessary to define the parameters of the module.

The available data are organized by group as shown in the examples below.

	Configuration of meter information The mandatory information is: - The meter number - The meter index - The diameter of the meter <table border="1"> <thead> <tr> <th colspan="3">▼ Meter</th> </tr> </thead> <tbody> <tr> <td>Meter SN</td> <td>123</td> <td>12345678</td> </tr> <tr> <td>Index to set (m3)⁽ⁱ⁾</td> <td>0.000</td> <td>0.250</td> </tr> <tr> <td>Customer text field</td> <td colspan="2"></td> </tr> <tr> <td>Diameter⁽ⁱ⁾</td> <td>Unspecified</td> <td>DN 15</td> </tr> </tbody> </table>	▼ Meter			Meter SN	123	12345678	Index to set (m3) ⁽ⁱ⁾	0.000	0.250	Customer text field			Diameter ⁽ⁱ⁾	Unspecified	DN 15									
▼ Meter																									
Meter SN	123	12345678																							
Index to set (m3) ⁽ⁱ⁾	0.000	0.250																							
Customer text field																									
Diameter ⁽ⁱ⁾	Unspecified	DN 15																							
Configuration of M-Bus output <table border="1"> <thead> <tr> <th colspan="3">▼ MBus</th> </tr> </thead> <tbody> <tr> <td>Primary Address</td> <td>0</td> <td>1</td> </tr> <tr> <td>Index Unit</td> <td>l</td> <td></td> </tr> <tr> <td>Baudrate</td> <td>2400</td> <td></td> </tr> </tbody> </table>	▼ MBus			Primary Address	0	1	Index Unit	l		Baudrate	2400		Configuration of Pulses output <table border="1"> <thead> <tr> <th colspan="3">▼ Pulse output</th> </tr> </thead> <tbody> <tr> <td>Output Mode</td> <td>PULSE / GND (Compensation)</td> <td></td> </tr> <tr> <td>Pulse weight (l)</td> <td>1</td> <td></td> </tr> <tr> <td>Pulse Length (ms)</td> <td>30</td> <td></td> </tr> </tbody> </table>	▼ Pulse output			Output Mode	PULSE / GND (Compensation)		Pulse weight (l)	1		Pulse Length (ms)	30	
▼ MBus																									
Primary Address	0	1																							
Index Unit	l																								
Baudrate	2400																								
▼ Pulse output																									
Output Mode	PULSE / GND (Compensation)																								
Pulse weight (l)	1																								
Pulse Length (ms)	30																								

INDICATION


Changing the index resets all alarms, initializes the negative volume and synchronizes the date and time with that of your smartphone.

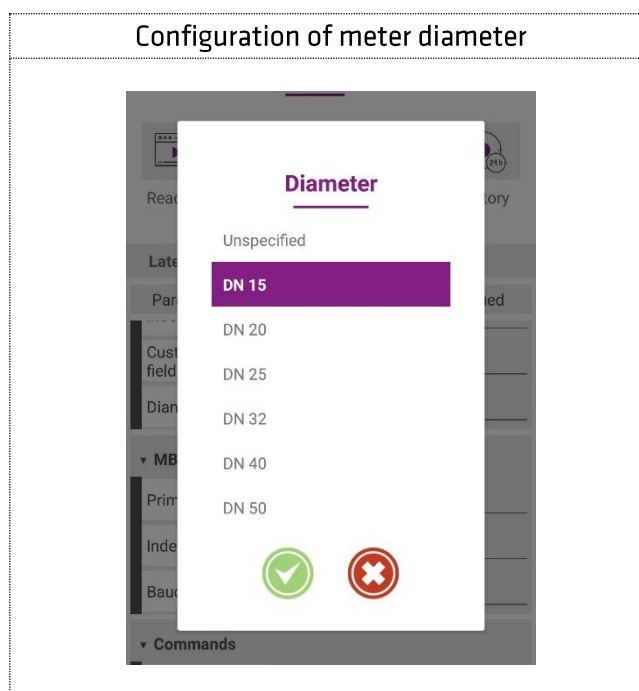
INDICATION


If the meter diameter is not specified, the management of Burst, Leak and Return water alarms is not operational.

INDICATION


The alarm thresholds for Burst, Leak and Return water detection are automatically updated when the diameter of the meter is changed and are reset to the default value.

INDICATION


The analysis of the fraud alarm only starts when the module has detected a volume of water greater than 5 litres.

Additional functions are available such:

- Set the time,
- Delete the histories stored in the module,
- Initialize alarms,
- Changing predefined alarm values.

Special Commands

▼ Commands

Reset

No

Configuration of alarms

▼ Alerts

Reset Tamper

No

Reset Reverse flow

No

Reset Maxflow

No

Reset Overload

No

Reset Burst

No

Leak threshold (l/h)

50

Overload threshold (l/h)

3125

8.7.4 aquastream® Radio L8 (LoRaWAN) modification

NOTE



Knowledge of LORAWAN communication is necessary to define properly the parameters of the module.

The available data are organized by group as shown in the examples below.

DEVICE

ReadOut Events Param History

Latest Read Date: 04/08/2020 11:22:47

Param Name	Current Value	Modified
aquastream		
Meter		
LoRa		
Alerts		

LOG

Configuration of meter information

The mandatory information is:

- The meter number
- The meter index
- The diameter of the meter

▼ Meter		
Meter SN	123	12345678
Index to set (m3) ⁽ⁱ⁾	0.000	0.250
Customer text field		
Diameter ⁽ⁱ⁾	Unspecified	DN 15


Configuration of LoRaWAN

▼ LoRa		
Lora Join	No	
Lora Message	No	

INDICATION



Changing the index resets all alarms, initializes the negative volume and synchronizes the date and time with that of your smartphone.

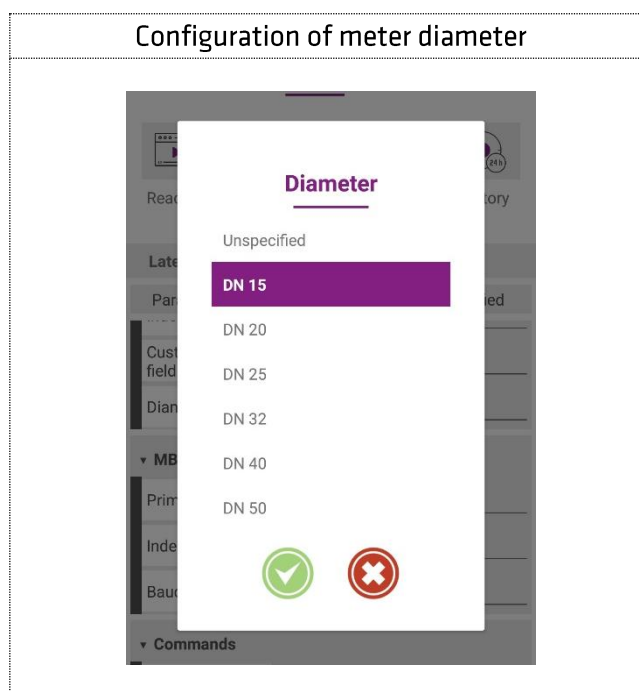
INDICATION


If the meter diameter is not specified, the management of Burst, Leak and Return water alarms is not operational.

INDICATION


The alarm thresholds for Burst, Leak and Return water detection are automatically updated when the diameter of the meter is changed and are reset to the default value.

INDICATION


The analysis of the fraud alarm only starts when the module has detected a volume of water greater than 5 litres.

Additional functions are available such:

- Set the time,
- Delete the histories stored in the module,
- Initialize alarms,
- Changing predefined alarm values.

Special Commands

▼ Commands

Reset

No

Configuration of alarms

▼ Alerts

Reset Tamper

No

Reset Reverse flow

No

Reset Maxflow

No

Reset Overload

No

Reset Burst

No

Leak threshold (l/h)

50


Overload threshold (l/h)

3125

8.8 Apply your modifications

To write the changes in the module, click on the following button.

The update screens are displayed.

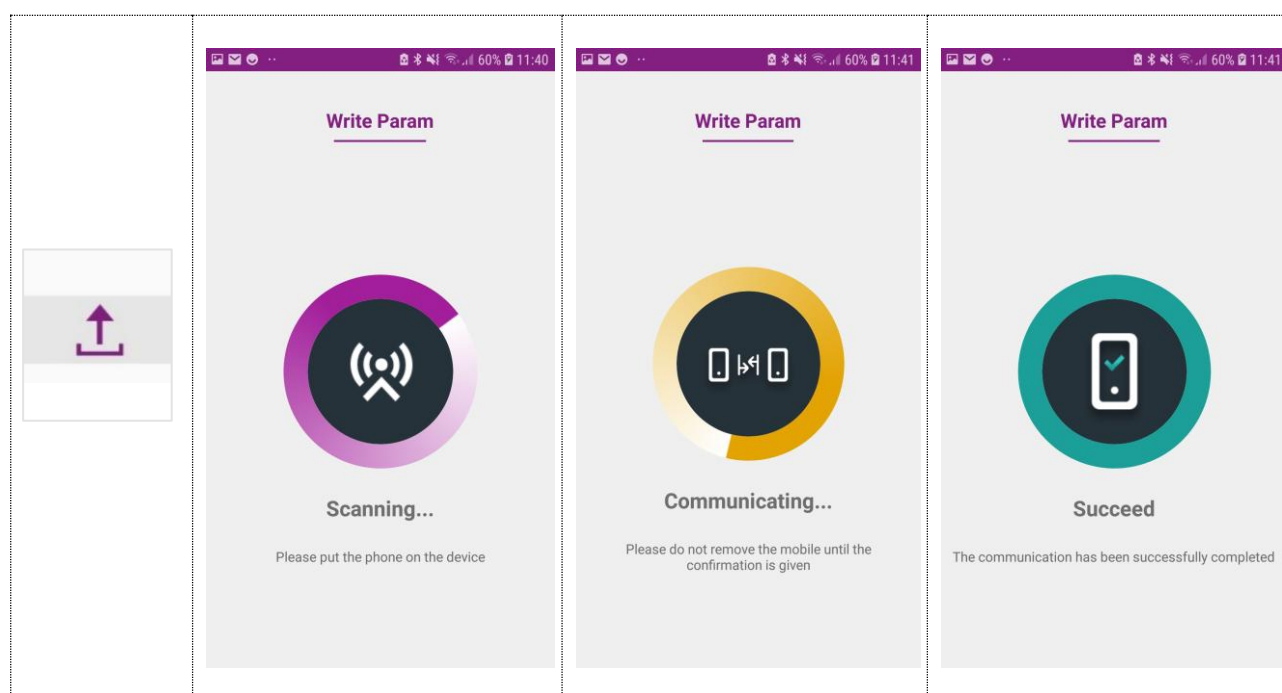

9. Technical data

9.1 aquastream® M-Bus

Technical data	
Resolution	1 liter
Power Supply	Integrated lithium 3,6V battery
Battery lifetime	Up to 16 years(*)
Environmental conditions	
Fluid	Water
Protection class	IP 68
Operating temperature	-10°C to +55°C
Storage temperature	-20°C to +70°C
Humidity	Up to 98% relative humidity, with condensation
Communication interface	
Protocol	M-Bus conformed EN 13757-2/3
Baud rate	300, 2400, 9600
Cable	Integrated with gel connector, 2 non-polarized wires, length 25cm
M-Bus Load	1,5 mA
Meter index	00000,000 m3 Configurable value during installation
Information M-Bus Frame (REQ_UD2)	Current main index Return water volume Current flow rate Maximum flow rate Date/Time Module manufacturing number Factory number of the water meter Firmware Version Hardware Version Status Info Battery life
Addresses	Primary Address 0-250 Secondary Address 8-digits Extended Secondary Address with serial number
Programming	
Interface	NFC - 13,56 MHz
Alarms	Manipulation/wrong installation, Overload, Leakage, Low Battery, Backflow, Burst
DataLogger	12 monthly values (end of month)
Programming Software	IM Connect+® Compatible with Android and iOS Available on Google Play and in the App Store

(*) Remaining battery life is calculated by software, based on the nominal capacity of the battery with a certain safety margin. Battery capacity may vary depending on manufacturing tolerances and operating conditions (e.g. temperature, humidity etc.).

In addition, if the remaining battery life of the transmission battery becomes negative, it means that the operating time of the device has exceeded the estimated battery life. Immediate replacement of the device is strongly recommended. Subsequent operation of the device is not guaranteed in this case.

INDICATIONS



Cable 2 wires, | AWG : 20 → 22 | Section : 0,34 → 0,52 mm²
 Please follow the instructions according to the mounting instructions.

9.2 aquastream® M-Bus/Pulses

Technical data	
Resolution	1 liter
Power Supply	Integrated lithium 3,6V battery
Battery lifetime	Up to 16 years(*)
Environmental conditions	
Fluid	Water
Protection class	IP 68
Operating temperature	-10°C to +55°C
Storage temperature	-20°C to +70°C
Humidity	Up to 98% relative humidity, with condensation
Communication interface	
Pulses output	Open Collector, 2 or 3 wires configurable
Modes	Different modes configurable 2 wires with compensation, 3 wires with direction (PULSE / DIR / GND) 3 wires (PULSE+ / PULSE- / GND) 3 wires for duplicate signal (PULSE1 / PULSE2 / GND)
Cable	3 wires configurable, 1,5m length
Backflow detection	Yes
Pulse Weight	Configurable (1, 2.5, 10, 100, 1000 litres...)
Pulse Duration	Configurable (30ms, 50ms, 100ms, 500ms, 1s...)
M-Bus Output	M-Bus conformed EN 13757-2/3
Baud-rate	300, 2400, 9600
Cable	2 non-polarized wires, length 1.5m
M-Bus Load	1,5 mA
Meter Index	00000,000 m3 Configurable value during installation
Information M-Bus Frame (REQ_UD2)	Current main index Return water volume Current flow rate Maximum flow rate Date/Time Module manufacturing number Factory number of the water meter Firmware Version Hardware Version Status info Battery life
Addresses	Primary Address 0-250 Secondary Address 8-digits Extended Secondary Address with serial number
Programming	
Interface	NFC - 13,56 MHz
Alarms	Manipulation/wrong installation, Overload, Leakage, Low Battery, Backflow, Burst
DataLogger	16 yearly values (end of year) – 48 monthly values (end of month) – 460 daily values (end of day) – 24 hourly values (last 24 hours)
Programming Software	IM Connect+® Compatible with Android and iOS Available on Google Play and in the App Store

(*) Remaining battery life is calculated by software, based on the nominal capacity of the battery with a certain safety margin. Battery capacity may vary depending on manufacturing tolerances and operating conditions (e.g. temperature, humidity etc.).

In addition, if the remaining battery life of the transmission battery becomes negative, it means that the operating time of the device has exceeded the estimated battery life. Immediate replacement of the device is strongly recommended. Subsequent operation of the device is not guaranteed in this case.

INDICATIONS


Cable 5 wires | AWG 22 - Section : 0,34mm² | Diameter external: 5,5mm
 Please follow the instructions according to the mounting instructions.

9.3 aquastream® Radio W8 (Wireless M-Bus/OMS)

Technical data	
Resolution	1 liter
Power Supply	Integrated lithium 3,6V battery
Battery lifetime	Up to 16 years(*)
Environmental conditions	
Fluid	Water
Protection class	IP 68
Operating temperature	-10°C to +55°C
Storage temperature	-20°C to +70°C
Humidity	Up to 98% relative humidity, with condensation
Communication interface	
Protocol	WM-Bus conformed EN 13757-4 , OMS 4.0
Frequency	868 MHz (T1 Mode)
Emission Interval	Every 16 seconds
Meter index	00000,000 m3 Configurable value during installation
Information WM-Bus Long frame	Current main index Return water volume Historical volume (end of month) Date volume History (end of month) Date/Time Status info Battery life Long telegram when the module is installed on the meter
Information WM-Bus Short frame	Status info Battery life Reduced telegram when the module is not installed on the meter
Addresses	OMS compliant address Manufacturer: IMT Version: 0x05 / 0x01 Serial number: 8-digit
Programming	
Interface	NFC - 13,56 MHz
Alarms	Manipulation/wrong installation, Overload, Leakage, Low Battery, Backflow, Burst
Datalogger	16 yearly values (end of year) – 48 monthly values (end of month) – 460 daily values (end of day) – 24 hourly values (last 24 hours)
Programming Software	IM Connect+® Compatible with Android and iOS Available on Google Play and in the App Store

(*) Remaining battery life is calculated by software, based on the nominal capacity of the battery with a certain safety margin. Battery capacity may vary depending on manufacturing tolerances and operating conditions (e.g. temperature, humidity etc.).

In addition, if the remaining battery life of the transmission battery becomes negative, it means that the operating time of the device has exceeded the estimated battery life. Immediate replacement of the device is strongly recommended. Subsequent operation of the device is not guaranteed in this case.

9.4 aquastream® Radio L8 (LoRaWAN)

Technical data	
Resolution	1 liter
Power Supply	Integrated lithium 3,6V battery
Battery lifetime	Up to 16 years(*)
Environmental conditions	
Fluid	Water
Protection class	IP 68
Operating temperature	-10°C to +55°C
Storage temperature	-20°C to +70°C
Humidity	Up to 98% relative humidity, with condensation
Communication interface	
Protocol	LoRaWAN according to LoRaWAN 1.0.4
Frequency	868 MHz
Emitted Power	25 mW (14 dBm)
Radio Range	Up to 15 km (depending on the environment conditions)
Connection mode	Over-The-Air Activation OTAA Activation by Personalization ABP
Transmission interval	Default Twice a day (6.00 and 18.00 UTC) Configurable up to 15min interval Value below possible with impact on battery life-time
Readout interval	Permanent
Meter index	00000,000 m3 Configurable value during installation
Telegram content by default	Current meter reading Returned water volume Meter number Date/Time Status info Battery life
Addresses	LoRaWAN compliant address (16 digits)
Programming	
Interface	NFC - 13,56 MHz
Alarms	Manipulation/wrong installation, Overload, Leakage, Low Battery, Backflow, Burst
DataLogger	16 yearly values (end of year) – 48 monthly values (end of month) – 460 daily values (end of day) – 24 hourly values (last 24 hours)
Programming Software	IM Connect+® Compatible with Android and iOS Available on Google Play and in the App Store

(*) Remaining battery life is calculated by software, based on the nominal capacity of the battery with a certain safety margin. Battery capacity may vary depending on manufacturing tolerances and operating conditions (e.g. temperature, humidity etc.).

In addition, if the remaining battery life of the transmission battery becomes negative, it means that the operating time of the device has exceeded the estimated battery life. Immediate replacement of the device is strongly recommended. Subsequent operation of the device is not guaranteed in this case.

10. Maintenance

The aquastream® module requires no special maintenance.

WARNING



Do not clean the product with solvents or abrasives as they may damage the plastic cover.
If necessary, use a damp cloth or sponge.

11. Waste disposal

At the end of its life cycle, this product must be disposed of in accordance with local recycling or waste disposal regulations.

The battery is not replaceable and cannot be changed!

WARNING



The battery is permanently installed and cannot be replaced or changed, therefore:
 Do not open the unit or break the housing
 Do not dispose of the product in a fire or oven
 Do not crush or deform the product

The separate collection and recycling of used products contributes to the conservation of natural resources and ensures that they are disposed of in a way that does not harm the environment and nature.



12. Certification, regulation

Certificates and declarations of conformity are available at the following address:
www.integra-metering.com.

